

# **TECHNICAL DATA SHEET**

04/09/2012	TDST DOC108626 000

Designation	Tahoma Sensor Module
Reference	
Range	RTD

#### **FUNCTIONS**

#### The TaHoma sensor module can only work with TaHoma connect

Installation: Plug the sensor module to TaHoma thanks to USB wire.

Pair RTD detectors to the TaHoma

Sensors: Set a scenario and/or an alert when detectors change of state



## **TECHNICAL SPECIFICATIONS**

Box Material ABS Color White

Size 90 x 50 x 25 mm

Protection factor against solid & splashproof IP 30

Weight

24 months

40g 5V - USB power supply Power supply

Current (maximum) 50mA Current (nominal) 20mA

RTD

Radio frequency 433.42 - 433.92 MHz

OOK Modulation type RTD Protocol

Radio range 15 m through 2 concrete walls


Antenna integrated

Product lifetime warranty

-30℃ / +70℃ Temperature range Storing ეტ / +60℃ Working

Drop test 1 per face (height: 1,2m)

TaHoma compatibility Cannot be used without TaHoma

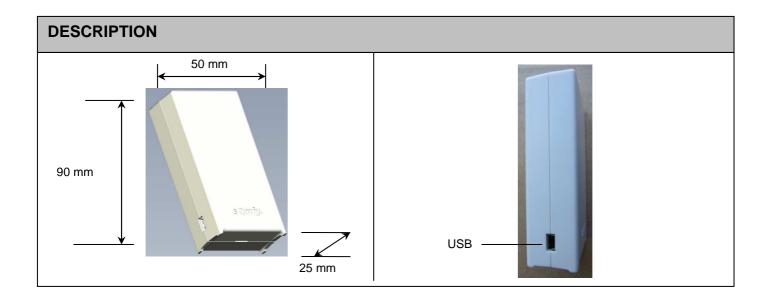

# **COMPATIBILITIES**

#### **RTD detectors**

Movement detector Smoke detector Opening detector

Maximum Sensors storage 2

### **INSTALLATION**

- 1. TaHoma must be operational
- 2. Connect the sensor module to the TaHoma thanks to USB cable
  Distance between TaHoma and the sensor should be at least 30 cm
- 3. Go to CONFIGURATION menu and select "sensors" then manage
- 4. Click on add to add a sensor and follow instructions on the screen
- 5. Click on MY SETTINGS, my peripheral devices and sensors to customize action to perform on sensor detection